

CAN Adapters: All output from the CAN adapter will be written in one line in HyperTerminal?

You must configure the right settings and switch on "***Append line feeds to incoming line ends***":

Unique solution ID: #1029

Author: Support

Last update: 2009-01-05 10:52