

# OnRISC: How to configure networking on OnRISC?

Debian's networking configuration is done in the following files:

/etc/network/interfaces (see <http://www.digipedia.pl/man/interfaces.5.html> for further details)

/etc/resolv.conf (see <http://linux.die.net/man/5/resolv.conf> for further details)

For dynamic IP address assignment ( DHCP ) only the /etc/network/interfaces must be changed. So configuration for eth0 looks like this:

```
auto eth0  
  
iface eth0 inet dhcp
```

For static IP address assignment both files must be changed, especially if DNS functionality is needed. Assuming your router has IP address 192.168.254.1 the configuration for eth0 in /etc/network/interfaces looks like this:

```
auto eth0  
  
iface eth0 inet static  
  
address 192.168.254.254  
  
netmask 255.255.255.0  
  
gateway 192.168.254.1
```

## *OnRISC: How to configure networking on OnRISC?*

*/etc/resolv.conf* gets following entry:

```
nameserver 192.168.254.1
```

Â

*Unique solution ID: #1009*

*Author: Support*

*Last update: 2010-12-20 11:57*